

TIPMATIC PLUS CLICK-ON

For Nexis Click-on hinges without self-closing mechanism



- Doors open by gently tapping the front, in a wide opening angle
- Compatible with hinges from the Nexis Click-on series without self-closing mechanism
- Can also be retrofitted thanks to easy installation

ORDER INFORMATION

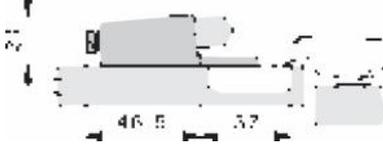
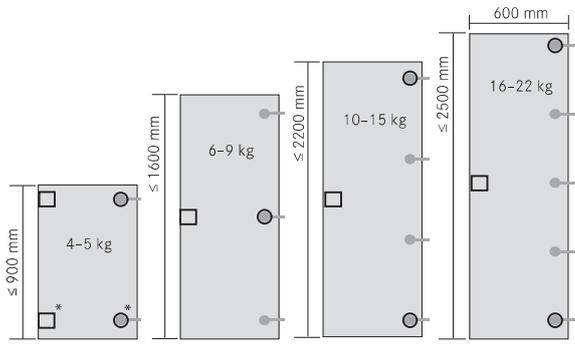
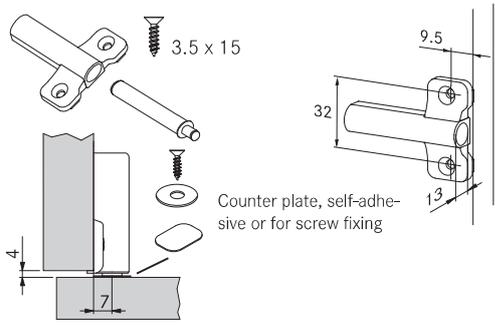
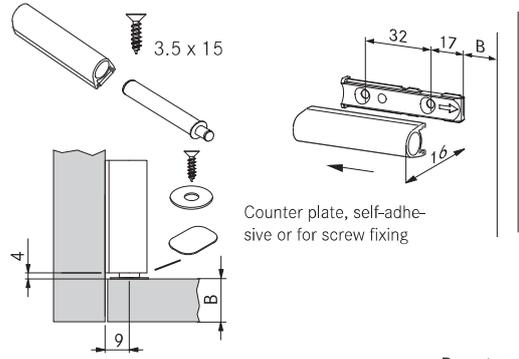
 
2

Tipmatic Plus Click-on set		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 Tipmatic Plus Click-on adapter • 1 Tipmatic Plus ejector • 1 counter plate, self-adhesive • 1 counter plate for screw fixing , incl. screw • 1 magnetic pin 		F069073752
Tipmatic Plus Click-on adapter		Item No.
<ul style="list-style-type: none"> • Tipmatic Plus Click-on adapter for Nexis Click-on hinges 		F069073751
Tipmatic Plus ejector		Item No.
<ul style="list-style-type: none"> • Tipmatic Plus ejector for Tipmatic Plus Click-on adapter 		F069135060
Linear adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • Design solution, also in conjunction with inset doors • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073696
Frame adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • For quick retrofit installation • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073697
Magnetic pin and counter plates		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 magnetic pin • 1 counter plate, self-adhesive • 1 counter plate or screw fixing , incl. screw 		F069135061

Nexis Click-on	206
Nexis Slide-on	270

INSTALLATION INFORMATION

All dimensions in millimetres

<p>Dimensions</p> 	<p>Position for Tipmatic Plus Click-on</p>  <p>○ Recommended position for Tipmatic Plus Click-on. □ Position for counter plate (at level of the magnetic pin). One magnetic pin per door. ⊗ Recommended position for Tipmatic Plus Click-on for applications in wall cabinets. □* Position for counter plate (at level of the magnetic pin) in wall cabinets. One magnetic pin per door.</p>
<p>Position for frame adapter plate</p>  <p>Counter plate, self-adhesive or for screw fixing</p> <p>Do not use door buffers!</p>	<p>Position for linear adapter plate</p>  <p>Counter plate, self-adhesive or for screw fixing</p> <p>Do not use door buffers!</p>
<p>Installation</p> <p>1 </p> <p>2 </p> <p>3 </p> <p>4  </p> <p>5 </p>	<p>Tipmatic Plus Click-on – quick and easy to fit</p> <ol style="list-style-type: none"> 1 Remove hinge arm cover cap (if fitted). 2 Insert Tipmatic Plus Click-on adapter, engaging the two small hooks at a slight angle in the recesses underneath the hinge cup. 3 Press down both sides of the adapter simultaneously, until it engages with an audible click. 4 Fully insert Tipmatic Plus ejector into the adapter opening, with the flat side facing downwards. 5 Adjust the front gap, replace hinge arm cover cap (if available). <p>NOTES</p> <p>Tipmatic Plus Click-on is only suitable for hinges without self-closing mechanism.</p> <p>Before attaching the self-adhesive plate, ensure that the surface is clean and free from grease.</p> <p>Grass does not give any warranty if Tipmatic Plus is used with a different hold-closed system.</p> <p>When fitting Grass furniture hardware, the installation instructions supplied with the applicable sales literature must be observed in detail, otherwise the company cannot accept liability. If you require further information relating to installation and assembly, please contact one of our factories directly. We thank you for your understanding.</p>

2

170° TIPMATIC PLUS

For 170° wide-angle hinges without self-closing mechanism



- Doors open by gently tapping the front, in a wide opening angle
- For 170° Nexis Impresso wide-angle hinges without self-closing mechanism
- For 170° Nexis Click-on wide-angle hinges without self-closing mechanism
- Can also be retrofitted thanks to easy installation

ORDER INFORMATION

2

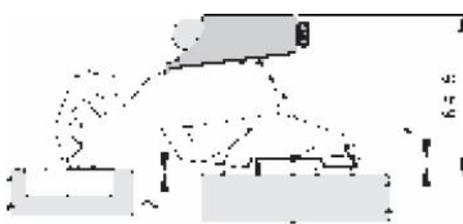
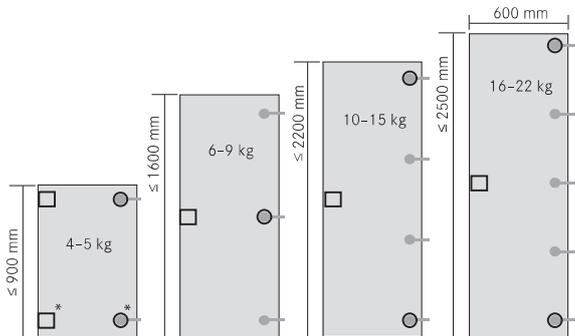
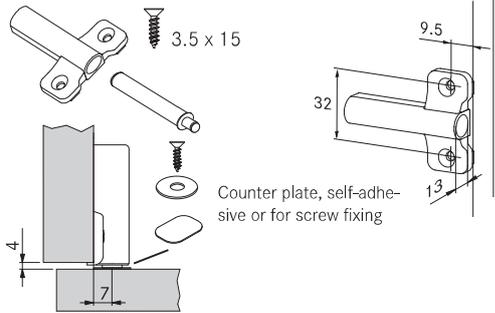
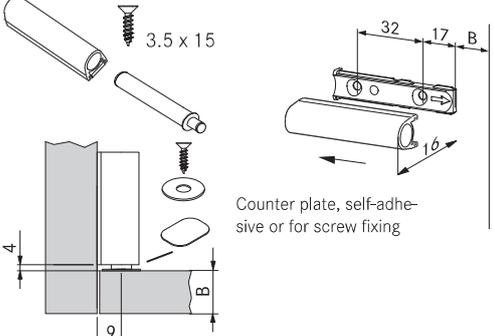
170° Tipmatic Plus set		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 170° Tipmatic Plus adapter • 1 Tipmatic Plus ejector • 1 counter plate, self-adhesive • 1 counter plate for screw fixing, incl. screw • 1 magnetic pin 		F069135019
Tipmatic Plus Click-on adapter		Item No.
<ul style="list-style-type: none"> • 170° Tipmatic Plus adapter for Nexis Impresso and 170° Nexis Click-on wide-angle hinges 		F069135017
Tipmatic Plus ejector		Item No.
<ul style="list-style-type: none"> • Tipmatic Plus ejector for 170° Tipmatic Plus adapter 		F069135060
Linear adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • Design solution, also in conjunction with inset doors • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073696
Frame adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • For quick retrofit installation • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073697
Magnetic pin and counter plates		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 magnetic pin • 1 counter plate, self-adhesive • 1 counter plate for screw fixing, incl. screw 		F069135061

Nexis Impresso 65	170
Nexis Click-on 65	214

Nexis Slide-on 65	278

INSTALLATION INFORMATION

All dimensions in millimetres

<p>Dimensions</p> 	<p>Position for 170° Tipmatic Plus</p>  <p>○ Recommended position for Tipmatic Plus 170°. □ Position for counter plate (at level of the magnetic pin). One magnetic pin per door. ⊗ Recommended position for Tipmatic Plus 170° for applications in wall cabinets. □* Position for counter plate (at level of the magnetic pin) in wall cabinets. One magnetic pin per door.</p>
<p>Position for frame adapter plate</p>  <p>Counter plate, self-adhesive or for screw fixing</p> <p style="text-align: right;">Do not use door buffers!</p>	<p>Position for linear adapter plate</p>  <p>Counter plate, self-adhesive or for screw fixing</p> <p style="text-align: right;">Do not use door buffers!</p>
<p>Installation</p> <p>1  2 </p> 	<p>170° Tipmatic Plus– quick and easy to fit</p> <ol style="list-style-type: none"> Fully insert Tipmatic Plus ejector into the adapter opening, with the flat side facing downwards. Insert adapter, engaging the two small hooks at a slight angle in the recesses underneath the hinge arm. Press down the Tipmatic Plus 170° adapter until it engages with an audible click. <p>NOTES</p> <p>170° Tipmatic Plus is only suitable for hinges without self-closing mechanism.</p> <p>Before attaching the self-adhesive plate, ensure that the surface is clean and free from grease.</p> <p>Grass does not give any warranty if Tipmatic Plus is used with a different hold-closed system.</p> <p>When fitting Grass furniture hardware, the installation instructions supplied with the applicable sales literature must be observed in detail, otherwise the company cannot accept liability. If you require further information relating to installation and assembly, please contact one of our factories directly. We thank you for your understanding.</p>



TIPMATIC PLUS MIRRO

For Nexis Click-on Mirro hinges without self-closing mechanism



- Doors open by gently tapping the front, in a wide opening angle
- For Nexis Mirro and Nexis Mirro -15° hinges without self-closing mechanism
- Can also be retrofitted thanks to easy installation

ORDER INFORMATION

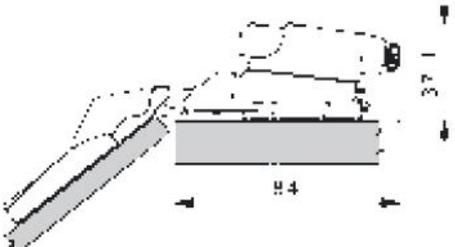
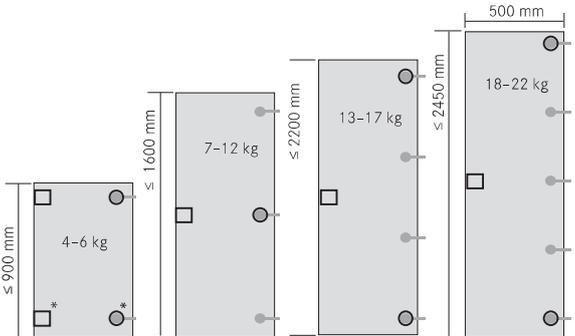
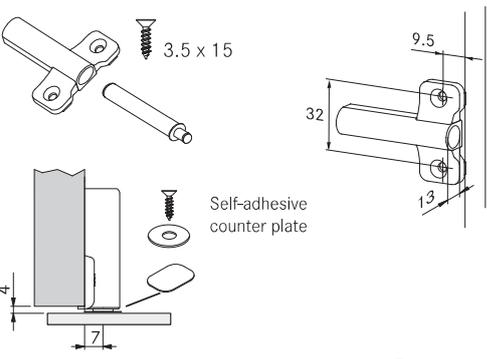
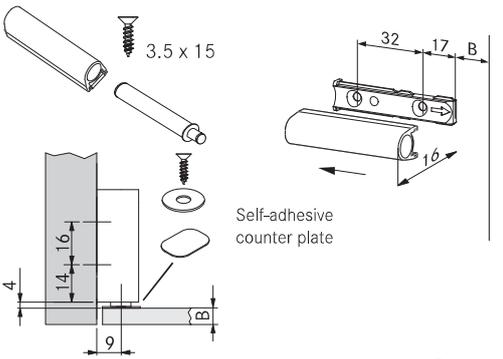
 
2

Tipmatic Plus Mirro set		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 Tipmatic Plus Mirro adapter • 1 Tipmatic Plus ejector • 1 counter plate, self-adhesive • 1 magnetic pin 		F069073746
Tipmatic Plus Mirro adapter		Item No.
<ul style="list-style-type: none"> • Tipmatic Plus Mirro adapter for Nexis Click-on Mirro hinges 		F069135304
Tipmatic Plus ejector		Item No.
<ul style="list-style-type: none"> • Tipmatic Plus ejector for Tipmatic Plus Mirro adapter 		F069135060
Linear adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • Design solution, also in conjunction with inset drawers • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073696
Frame adapter plate for magnetic pin		Item No.
<ul style="list-style-type: none"> • For quick retrofit installation • Fixing with wood screws (Ø 3.5 x 13 mm) 		F069073697
Magnetic pin and counter plate		Item No.
<p>1 set includes:</p> <ul style="list-style-type: none"> • 1 magnetic pin • 1 counter plate, self-adhesive 		F069135061

Nexis Click-on 07 Mirro	250
Nexis Click-on 07/-15° Mirro	252

INSTALLATION INFORMATION

All dimensions in millimetres

<p>Mirro dimensions</p>  <p style="text-align: right;">Drawing with mounting plate height 2</p>	<p>Position for Tipmatic Plus Mirro</p>  <p>○ Recommended position for Soft-close Mirro ● Position for additional Soft-close Mirro (if required)</p>
<p>Mirro -15° dimensions</p>  <p style="text-align: right;">Drawing with mounting plate height 2</p>	<p>Position for Tipmatic Plus Mirro frame adapter plate</p>  <p style="text-align: right;">Do not use door buffers!</p>
<p>Position for linear adapter plate</p>  <p style="text-align: right;">Do not use door buffers!</p>	
<p>Installation</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1</p>  </div> <div style="text-align: center;"> <p>2</p>  </div> </div> 	<p>Tipmatic Plus Mirro – quick and easy to fit</p> <ol style="list-style-type: none"> 1 Insert Tipmatic Plus ejector into the adapter opening, with the flat side facing to the left. Insert adapter engaging the hook into the recess underneath the hinge arm. 2 Push the Tipmatic Plus Mirro adapter back until it engages with an audible click. <p>NOTES</p> <p>Tipmatic Plus Mirro is only suitable for hinges without self-closing mechanism.</p> <p>Before attaching the self-adhesive plate, ensure that the surface is clean and free from grease.</p> <p>Grass does not give any warranty if Tipmatic Plus is used with a different hold-closed system. When fitting Grass furniture hardware, the installation instructions supplied with the applicable sales literature must be observed in detail, otherwise the company cannot accept liability. If you require further information relating to installation and assembly, please contact one of our factories directly. We thank you for your understanding.</p>

TIPMATIC

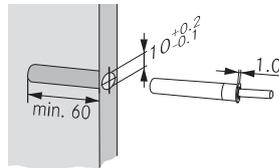
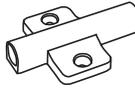
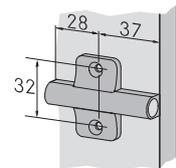
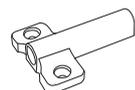
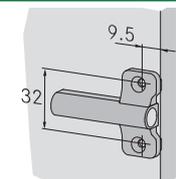
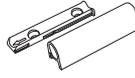
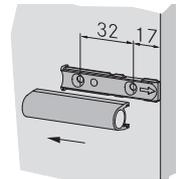
For handle-free wooden and aluminium frame doors



- Doors open to a convenient opening angle by gently tapping the front
- All hinges without self-closing mechanism can be used
- Wide catching range of magnet ensures reliable door closing
- The front gap can be adjusted between 2.5 and 5.5 mm using the integrated, self-locking and toolless depth adjustment
- Installation in the front edge of the cabinet or using an adapter plate

ORDER INFORMATION

2

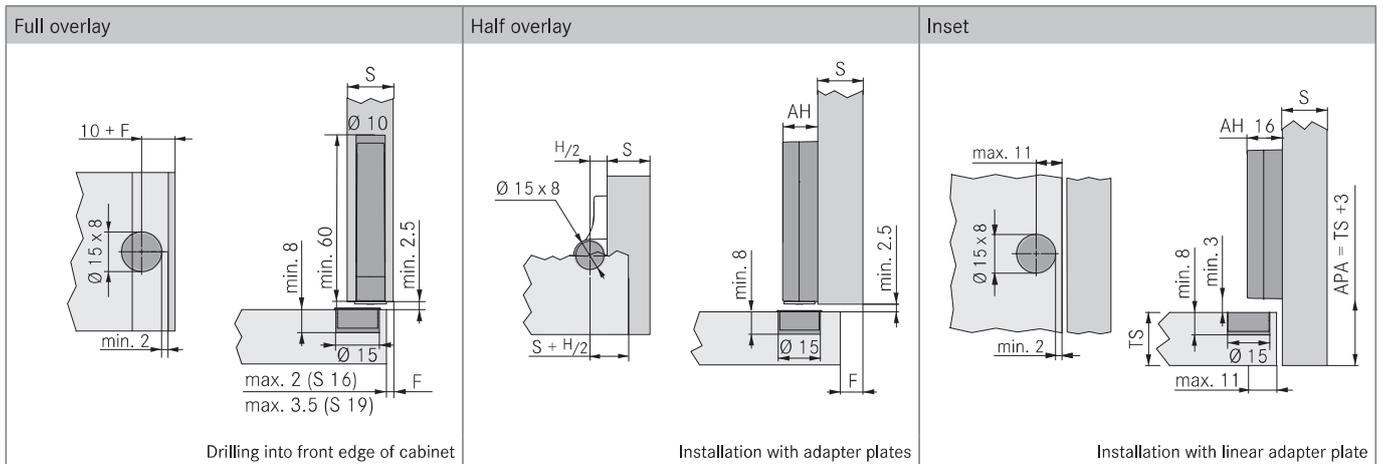
Tipmatic Pin	For drilling	Item No.
<ul style="list-style-type: none"> • Includes magnet, Ø 15 x 8 mm (hole edge cover 1 mm) • Hole drilled into cabinet front edge • Plastic RAL 7036, platinum grey 		F069068873
Adapter plate for line hole drilling	For Euro screws	Item No.
<ul style="list-style-type: none"> • Suitable for 28 and 37 mm hole spacing • Fixing with Euro screws (Ø 6.3 x 13.5 mm) • Plastic RAL 7035, light grey 		F069063310
Frame adapter plate	For screw fixing	Item No.
<ul style="list-style-type: none"> • For quick retrofit installation • Fixing with wood screws (Ø 3.5 x 13 mm) • Plastic RAL 7035, light grey 		F069063311
Linear adapter plate	For screw fixing	Item No.
<ul style="list-style-type: none"> • Design solution – also in conjunction with inset drawers • Fixing with wood screws (Ø 3.5 x 13 mm) • Plastic RAL 7035, light grey 		F069063309

Nexis Impresso	162
Nexis Click-on	206

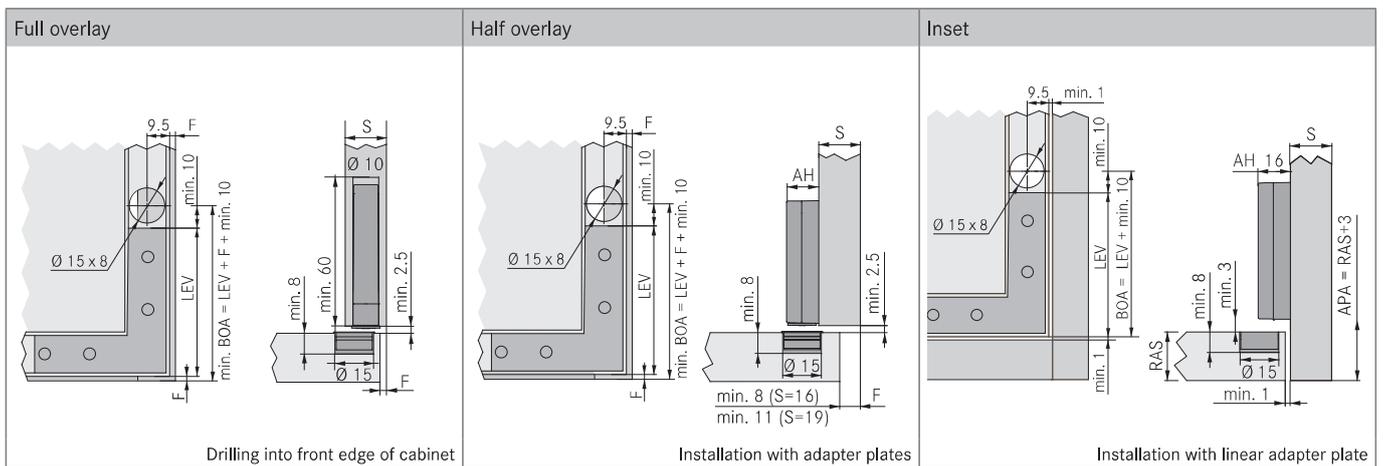
Nexis Slide-on	270

INSTALLATION INSTRUCTIONS FOR WOODEN DOORS

All dimensions in millimetres



INSTALLATION INSTRUCTIONS FOR ALUMINIUM FRAME DOORS



LEGEND

AH Adapter height	H Height	TS Door thickness
APA Adapter plate distance	LEV Length of corner connector	
BOA Drilling distance	RAS Frame thickness	
F Reveal	S Cabinet side wall	



TIPMATIC

For handle-free glass and mirror doors



- Doors open to a convenient opening angle by gently tapping the front
- All hinges without self-closing mechanism can be used
- Wide catching range of magnet ensures reliable door closing
- The front gap can be adjusted between 2.5 and 5.5 mm using the integrated, self-locking and toolless depth adjustment
- Installation in the front edge of the cabinet or using an adapter plate

ORDER INFORMATION

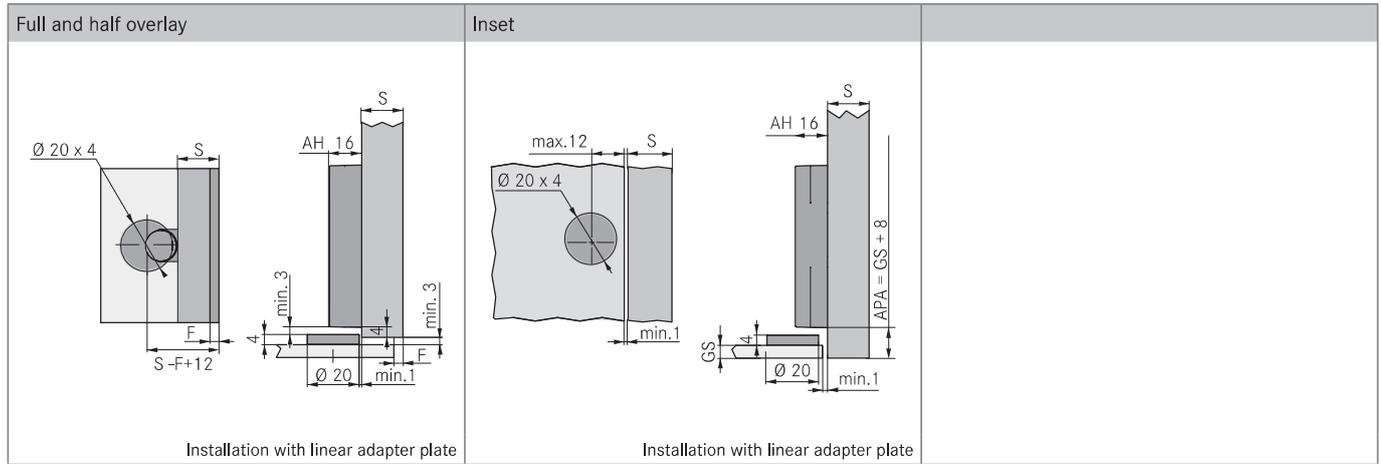
2

Tipmatic Pin for glass and mirror doors		Item No.
<ul style="list-style-type: none"> • Includes magnet, Ø 20 x 4 mm • Use with linear adapter plate • For glass and mirror doors • Plastic RAL 7036, platinum grey 		<p>F069068286</p>
Linear adapter plate	For screw fixing	Item No.
<ul style="list-style-type: none"> • Design solution – also in conjunction with inset doors • Fixing with wood screws (Ø 3.5 x 13 mm) • Plastic RAL 7035, light grey 		<p>F069063309</p>

Nexis Click-on 07 Mirro	250
Nexis Click-on 07/-15° Mirro	252

INSTALLATION INSTRUCTIONS FOR GLASS AND MIRROR DOORS

All dimensions in millimetres



INSTALLATION ADVICE

 
Thoroughly degrease the surface before attaching the magnet.

2

LEGEND

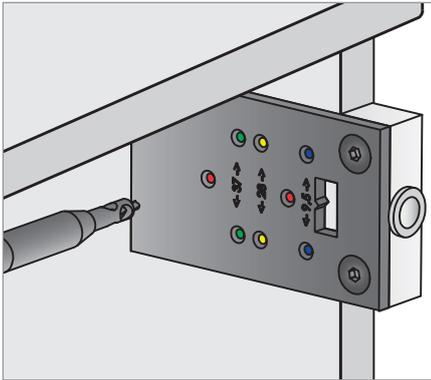
AH	Adapter height
APA	Adapter plate distance
F	Reveal
GS	Glass thickness

S	Cabinet side wall
---	-------------------



TIPMATIC

Assembly aids



ORDER INFORMATION

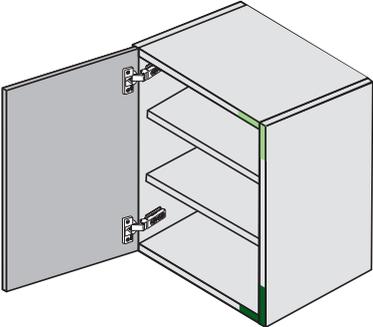
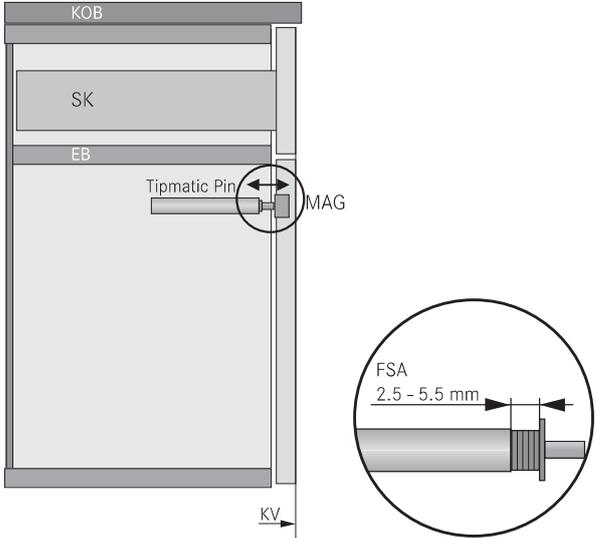
2

Drilling jig for adapter plates and Tipmatic Pin		Item No.
<ul style="list-style-type: none"> The Grass drilling jig can be used for all types of adapter plates and for the Tipmatic Pin Note: Drill bits are not supplied! 	<p>Ø 10mm / min. 60mm BT</p>	F146095470
Pilot drill bit		Item No.
<ul style="list-style-type: none"> Ø 3.5 mm 		F146035692
Pilot drill bit with stop ring		Item No.
<ul style="list-style-type: none"> Ø 10 mm 		F146038823

Tipmatic wooden and aluminium door	344		
Tipmatic glass and mirror doors	346		

ASSEMBLY AIDS

All dimensions in millimetres

Recommended positions	Front gap adjustment
 <p data-bbox="129 779 758 898"> Position in the top corner opposite the hinge in the base cabinet Position in the bottom corner opposite the hinge in the wall cabinet </p> <p data-bbox="129 947 766 1043"> General advice regarding the installation position: The Tipmatic element is installed opposite the hinge, either by inserting it into a hole in the front edge of the cabinet or with adapter plates, which are available in different versions. </p>	 <p data-bbox="852 927 1477 976"> Adjustment of front gap with integrated toolless depth adjustment The front gap can be set to line up with the Tipmatic drawer. </p>

2

LEGEND

BT	Drilling depth	KV	Front edge of cabinet	
EB	Dust panel	MAG	Magnet	
FSA	Front gap adjustment	SK	Drawer	
KOB	Worktop			