


# NOVA PRO DELUXE

## Drawer H90

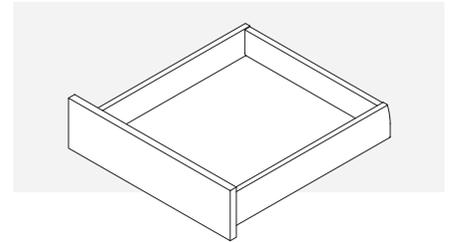

- Fully synchronised slide technology without mid-way knock
- Excellent running characteristics
- Maximum stability
- Minimum drawer deflection
- Integrated height and side adjustment
- Drawer front can be fitted and removed without tools
- Bottom panel machining not required
- Width of bottom and back panel is the same
- Optimal use of storage space due to straight inside surfaces and narrow installation width



### ORDER INFORMATION

1 Nova Pro Deluxe drawer sides H90, left/right			
NL	Metallic	Pure White	
270	F100065000	F100065027	
300	F100065003	F100065030	
350	F100065006	F100065033	
400	F100065009	F100065036	
450	F100065012	F100065039	
500	F100065015	F100065042	
550	F100065018	F100065045	
600	F100065021	F100065048	
650	F100065024	F100076500	



2 Nova Pro full extension slide Soft-close left/right			
NL	40 kg	70 kg	
270	F101063663	-	
300	F101063664	-	
350	F101063665	-	
400	F101063666	-	
450	F101063667	F101063711	
500	F101063668	F101063714	
550	F101063669	F101063717	
600	F101063670	F101063720	
650	-	F101063723	




3 Installation hook set for screw fixing for H90 consisting of: Items 3a, 3b			
	Metallic	Pure White	
	F102061675	F102076547	



3a Installation hook for H90			
	For press fitting 32 mm	For press fitting 50 mm	For screw fixing
	F102021854	F102021153	F102021855
	Expansion dowel 32 mm	Expansion dowel 50 mm	
	F102117719	F102117720	



3b Cover cap for eccentric adjustment unit			
	Metallic	Pure White	
	F102027330	F102076546	

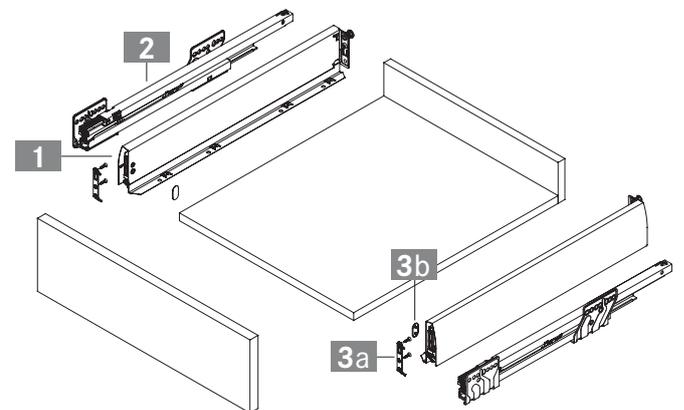



Nova Pro organising systems	95
Nova Pro Tipmatic Plus	48

Nova Pro Sensotronic	126
Nova Pro Sensomatic	131

Technical information	50
Assembly technology	116

**INSTALLATION INFORMATION**

All dimensions in millimetres

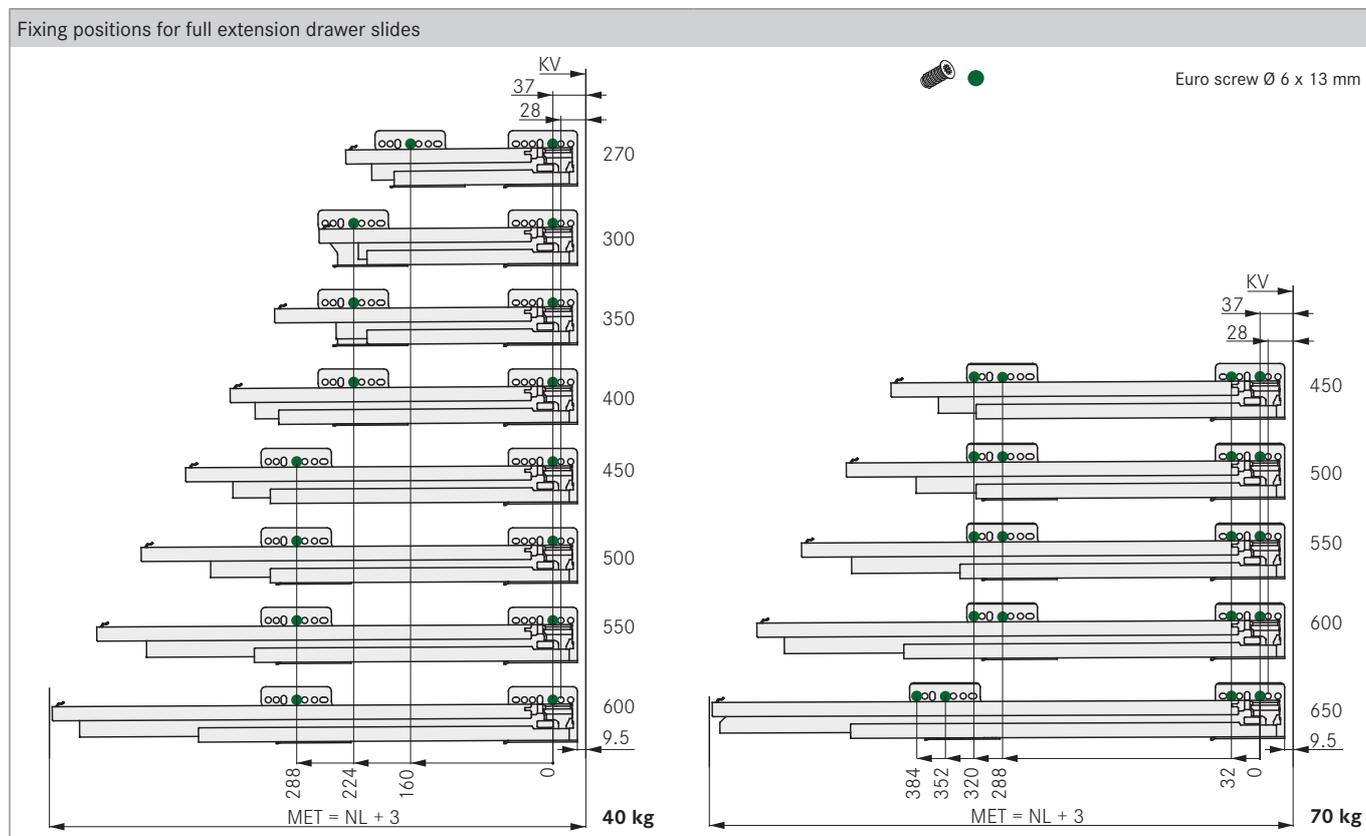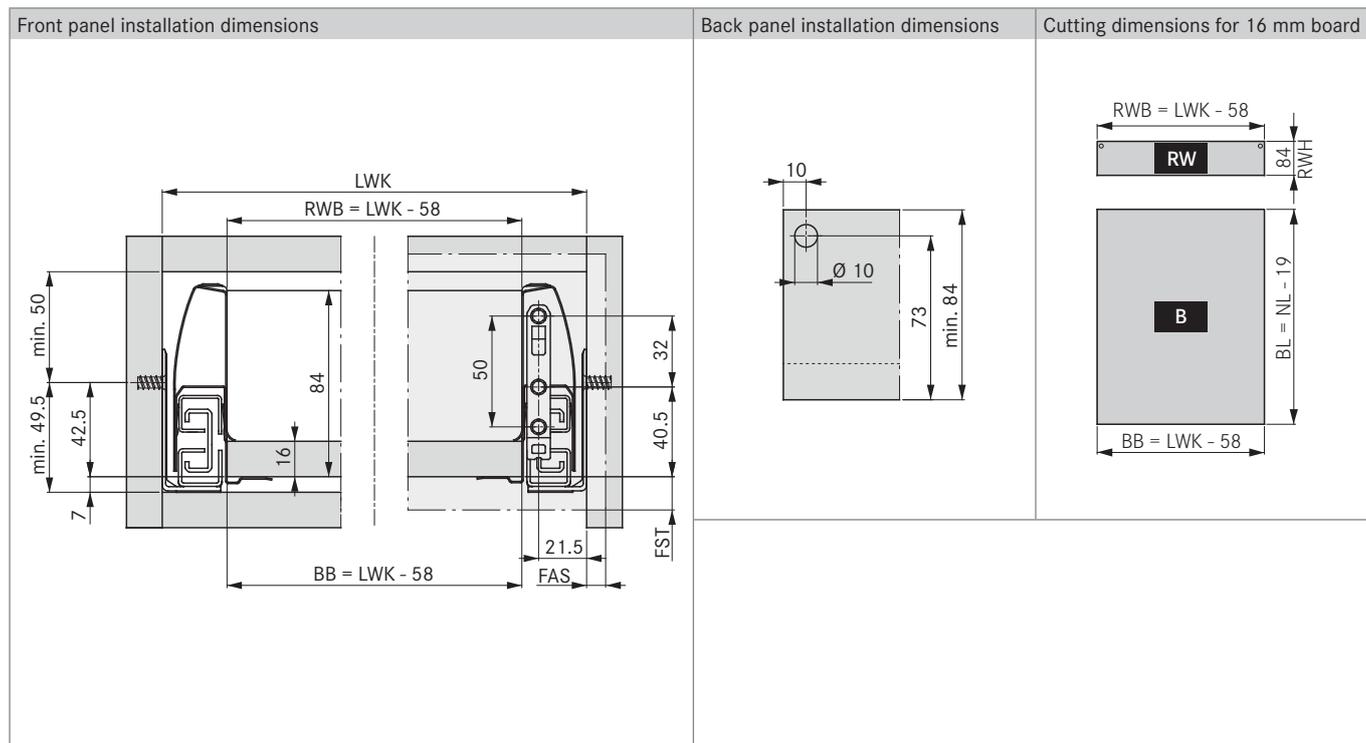

**LEGEND**

<b>B</b>	Bottom panel	<b>FST</b>	Front overlay	<b>NL</b>	Nominal length
<b>BB</b>	Bottom panel width	<b>KV</b>	Front edge of cabinet	<b>RW</b>	Back panel
<b>BL</b>	Bottom panel length	<b>LWK</b>	Inside cabinet width	<b>RWB</b>	Width of back panel
<b>FAS</b>	Front overlay, side	<b>MET</b>	Minimum installation depth	<b>RWH</b>	Height of back panel